


FUSE REPLACEMENT

(Refer to the maintenance precautions on page 50).

The main fuse (1), located on the starter magnetic switch (2) below the seat , is 30 A.

The spare main fuse(6) is located near the fuse box. The fuse box (4) is also located below the seat.

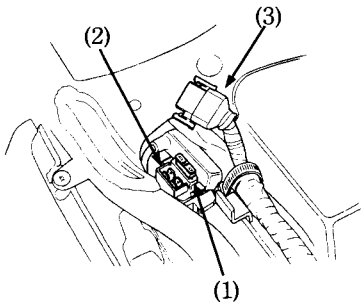


- (1) Main fuse (2) Starter magnetic switch
(3) Wire coupler

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the right side cover (page 33), disconnect the wire coupler (3) and remove the old fuse. Install a new fuse and reconnect the wire coupler.

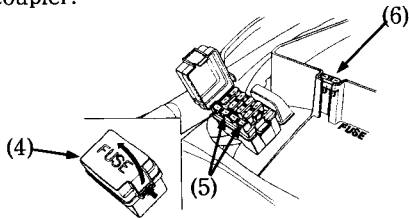

- (4) Fuse box (5) Spare fuses
(6) Spare main fuse