


● Wheel Removal And Inspection

1. Front Wheel Removal

Removal of the front wheel is performed in the following manner.

- a. Raise the front wheel off the ground by placing a support under the engine.
- b. Remove the speedometer cable ① from the front wheel hub assembly.
- c. Remove the axle holder fixing nuts ② and the front wheel assembly can be removed from the front fork.

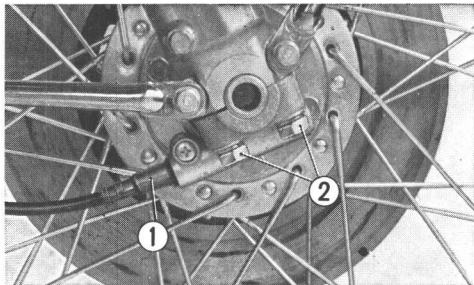

① Speedometer cable ② Axle holder fixingnut

To install the front wheel, reverse the sequence outlined above.

- NOTE: 1. With the front wheel removed the friction pads can be taken out of the caliper assembly and measured for wear (see page 58).**
2. Do not depress the brake lever when the wheel is off the motorcycle as this can cause the caliper piston to be forced out of the cylinder with subsequent loss of brake fluid. If this does occur servicing of the brake system will be necessary (see page 55).