


● Stop Light Switch Adjustment

The stop light switch adjustment is made at the stop light switch ① located on the right side toward the rear of the engine.

- a. First check the adjusting of the rear brake pedal in accordance with the procedure on page 59 to make sure that the brakes are properly adjusted.
- b. Turn on the main key switch (ignition position "Red" dot).
- c. Adjust the stop light switch ① so that the stop

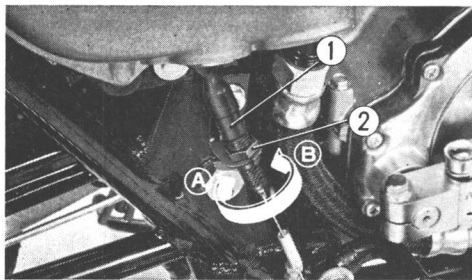

- ① Stoplight switch
② Adjusting nut

light will come on when the brake pedal is depressed to the point where the brake just starts to take hold. If the stop light switch is late in switching on the stop light, screw in ④ the switch lock nut ② and if the stop light comes on too early, screw out ⑤ the switch lock nut ②.

NOTE: There are separate stop light switches for the front and rear brake system. The front stop light switch is attached to the brake hose joint installed on the steering stem bracket. The front stop light switch should be independently checked for proper operation. Malfunction is corrected by replacement with a new switch.