

Ref. No.	Description	Function and Operating Method
7.	Oil pressure warning lamp (red)	<p>After turning on the ignition switch but before starting engine, check to make sure the oil pressure warning lamp is functioning (lamp comes on).</p> <p>The oil pressure warning lamp comes on when the ignition switch is switched on; it goes off when the engine is started and the prescribed engine oil pressure reached. Should the lamp light up while driving, it is an indication of a malfunction in the lubricating system in which case the motorcycle must be stopped at once, the engine turned off and the oil level in the oil tank checked. If the check reveals that the engine oil level is within the prescribed limits, the cause of the malfunction will have to be determined and corrected by contacting the nearest HONDA dealer. An occasional flickering of the warning lamp at or near idling speeds when the engine is at operating temperature is of no significance.</p>
8.	Neutral indicator lamp (green)	Lamp will be on when the transmission is in neutral.