


● Ignition Switch

The ignition switch ① is located on the left side under the forward end of the fuel tank. Functions are shown in the chart below.

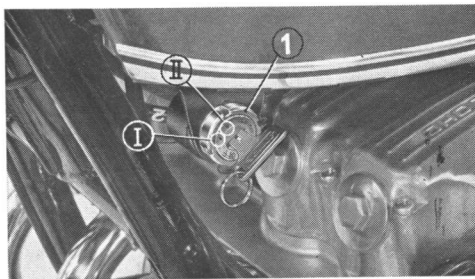

① Ignition switch

Key Position	Function	Key Removal
OFF	Electric circuit is open, engine will not start and all lights will not operate.	Key can be removed.
I (ON)	Electric circuits are closed, headlight, taillight, position lights and meter lights will be on and other lights can operate, and engine can be started.	Key cannot be removed.
II (Parking)	Electric circuit is open, however, the tail light will be lighted. The key should be removed when parking the motorcycle.	Key can be removed.