


● Engine Stop Switch

The three position engine stop switch ① is located on top of the right handlebar grip switch housing. In the "RUN" position (center) the ignition circuit is completed and engine will operate. In the "OFF" position (either side of center) the ignition circuit is open and the engine will not operate.

This switch is intended primarily as a safety or ignition switch and can nor-

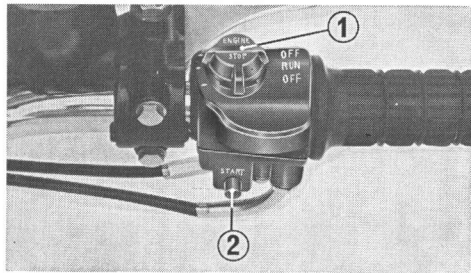

- ① Engine stop switch
- ② Starter button

mally remain in the "RUN" position. The ignition will not operate unless the ignition switch is in the "ON" position. When parking the motorcycle the ignition switch must be turned to the "OFF", or "PARKING" position and the key should be removed.

NOTE: If your motorcycle is stopped with the ignition switch on and the engine stop switch off, the headlight and taillight will be still on, resulting in battery discharge.

● Starter Button

The starter button ② is located directly below the engine stop switch ①.

When the starter button is pressed the starter motor will crank the engine.

As long as the starter button is pressed for cranking the engine, the headlight will automatically go out, but the taillight stays on.

Refer to pages 25~27 for the correct starting procedure.