


## ● Oil Tank

The oil tank ① is located on the right side below and to the rear of the seat center. This tank serves as a reservoir for oil which is supplied to engine, transmission and clutch components by an oil feed pump. A scavenge pump returns the oil to the oil tank. The CB750 engine incorporates a "dry sump" lubrication system, therefore, oil level inspection and oil change are performed at the oil tank. The oil tank capacity is 2.1 U.S. quarts. The motorcycle should be on the main stand when checking oil level. To check oil level, remove oil tank filler cap ② and observe oil level as indicated on the oil dipstick. If the oil level is between the upper ③ and lower ④ oil level marks on the dipstick, the engine can be operated. If the oil level is at or below the lower mark ④, yet some oil is visible in the tank, do not add oil to the tank until the engine has been started and

allowed to operate for several minutes and oil level on the dipstick has been rechecked.

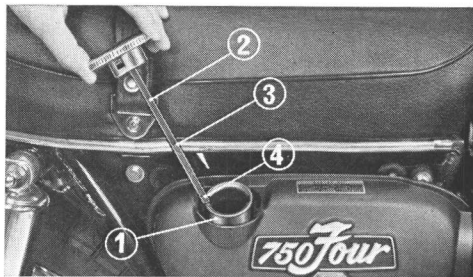

- ① Oil tank
- ② Oil tank filler cap
- ③ Upper level mark
- ④ Lower level mark

## ● Engine Oil Recommendation

Use only high detergent, premium quality motor oil certified to meet or exceed US automobile manufacturer's requirements for Service Classification SE.

Motor oils intended for Service SE will show this designation on the container.