


● Valve Tappet Clearance Adjustment

Excessive valve clearance will cause tappet noise, and insufficient clearance will cause valve damage and low power. Therefore, the valve tappet clearance should be maintained properly. Perform the valve tappet clearance check at the specified intervals.

NOTE:


- (1) The cylinders are numbered 1-4 starting from the left side when facing

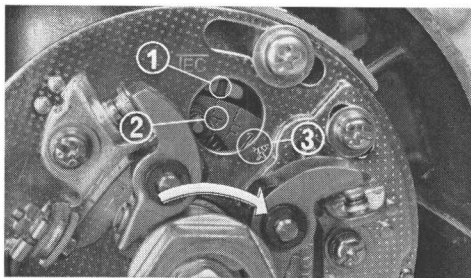

- ① Index mark
- ② "T" mark
- ③ 1-4 cylinder mark

forward while sitting on the motor-cycle.

- (2) The check or adjustment of the tappet clearance should be performed while the engine is cold. The clearance may tend to increase as the temperature rises.
- a. Turn fuel valve to the "OFF" position, remove both fuel lines from the fuel valve body, raise the seat and pull the rear fuel tank rubber mounting away from the rear tank mount. Raise the

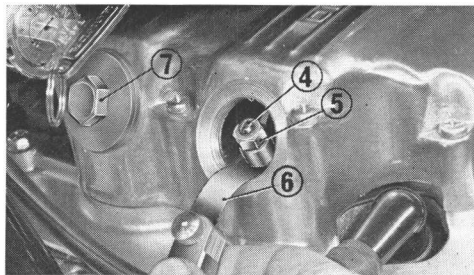

- ④ Tappet adjusting screw
- ⑤ Lock nut
- ⑥ Feeler gauge
- ⑦ Hole cap