

● Front Suspension

1. Front Suspension Inspection

Check the front fork assembly by locking the front brake and pumping the fork up and down vigorously.

Suspension action should be smooth and there must be no oil seepage.


Carefully inspect all front suspension fasteners for tightness. This includes the attachment points of the fork tubes, brake components and handlebar.

WARNING: If any suspension components appear worn or damaged, consult your Honda dealer for further inspection. The suspension components are directly safety related and your Honda dealer is qualified to determine whether or not replacement parts or repairs are needed.

2. Front Fork Oil Change

To maintain good riding characteristics and increase fork service life, the oil in the front fork should be changed periodically.

- Unscrew the front fork drain plug ① at the bottom of fork cylinder, drain the oil by pumping the fork while plug is out. Replace the plug securely after draining.

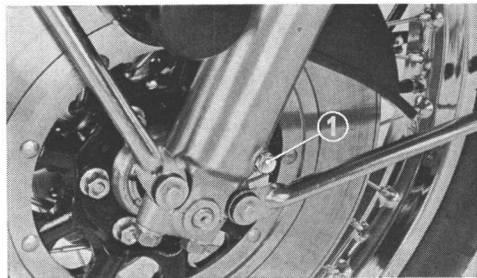

① Front fork drain plug