

## **WARNING:**

- 1. Never use a fuse with a different rating from that specified on the fuse box or specified in the Owner's Manual.**
- 2. Never use conductive material to replace a recommended fuse or serious damage to the electrical system of your motorcycle will result.**

## **● Head Light Beam Adjustment**

The headlight must be properly adjusted for safe driving. This motorcycle has provisions to adjust the headlight in the vertical and also horizontal directions.

- a. The vertical adjustment is made by loosening the bolts ① which mount the headlight assembly. The headlight is normally adjusted in the vertical direction so that the center of the beam intersects the ground at the point **50 m (165 feet)** in front of the motorcycle in the riding attitude.
- b. The horizontal beam adjustment is made with the adjusting screw ② located on the left side of the headlight when facing the motorcycle. Turning the screw in will focus the beam