


1. Headlight Bulb Replacement Procedure

- a. Remove horizontal adjusting screw ① and holding screws ②.
- b. Remove the upper and lower retaining lock pins ③ and screws ④ from the rim.
- c. Remove the two sealed beam unit retaining screws ⑤.
- d. Install a new sealed beam unit. Assemble by reversing the procedure described above.

2. Tail/Stoplight Bulb Replacement Procedure

- a. Remove the two screws retaining the tail/stop light lens.
- b. Press the bulb ① inward and twist to the left, and the bulb can be removed.
- c. Replace with a new bulb.
- d. When installing the taillight lens, do not overtighten the screw, as this may damage the lens.

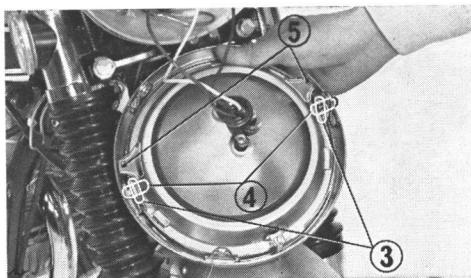

③ Lock pins
④ Lock screws

⑤ Sealed beam unit retaining screws