

Ref. No.	Description	Function
11	Tail/stoplight warning light	Lights when the tail/stoplight bulb is burned out. Should light for a few seconds and go out when the ignition switch is turned ON.
12	Oil pressur warning light	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when the engine is warm.</p> <p>CAUTION:</p> <p><i>* Running the engine with insufficient oil pressure will cause serious engine damage.</i></p>
13	High beam indicator	Lights when headlight is on high beam.
14	Neutral indicator	Lights when transmission is in neutral.