


4. Install the new oil filter and tighten it to 15—20 N·m (1.5—2.0 kg-m, 11—14 ft-lb) torque.
5. Check that the sealing washers on the drain plugs are in good condition and install the plugs.

Engine bottom: 30—40 N·m  
(3.0—4.0 kg-m, 22—29  
ft-lbs)

Frame: 24—30 N·m (2.4—3.0 kg-m,  
17—22 ft-lb)

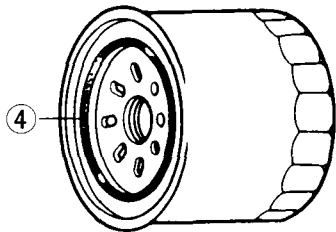

6. Fill the crankcase with approximately 2.8 liters (3.0 US qt) of the recommended oil.
7. Install the oil filler cap.
8. Start the engine and let it idle for a few minutes.
9. Stop the engine and check that the oil level is at the upper level mark on the dipstick. Make sure there are no oil leaks.

**NOTE:**

- \* When riding in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.