


## NOTE:

- \* Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

## Installation

1. Lower the forks lightly so that the hollows in the fork legs rest on top of the axle.

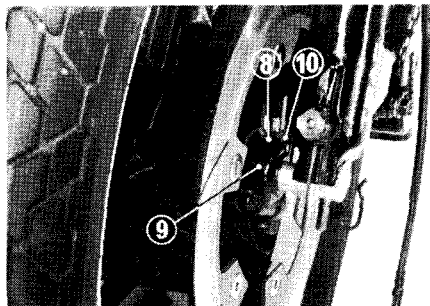

(8) Lug


(10) Tang

(9) Speedometer gear box

Make sure the lug (8) on the speedometer gear box (9) is against the back of the tang (10) on the left fork leg.

## CAUTION:

- \* When installing the wheel, fit the brake disc (13) carefully between the brake pads to avoid damaging the pads.
2. Install the axle holders (7) with the “F” arrow (11) forward and hand tighten the holder nuts (6) with flat washers and lockwashers.

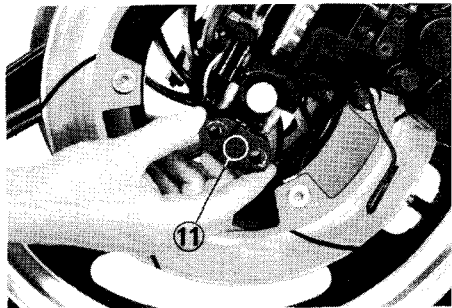

(11) “F” arrow