

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								Refer to Page
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
			I, L EVERY 1,000km (600mi)								88
DRIVE CHAIN SLIDER					I			I		I	94
BRAKE FLUID		NOTE (4)			I	I	R	I	I	R	20
BRAKE PAD WEAR					I	I	I	I	I	I	104
BRAKE SYSTEM					I			I		I	20, 104
* BRAKE LIGHT SWITCH								I		I	—
* HEADLIGHT AIM								I		I	—
CLUTCH SYSTEM					I	I	I	I	I	I	23
SIDE STAND								I		I	96
* SUSPENSION								I		I	95
* NUTS, BOLTS, FASTENERS					I			I		I	—
** WHEELS/TYRES								I		I	—
** STEERING HEAD BEARINGS					I			I		I	—