

# MAINTENANCE

page

<b>74</b>	<b>MAINTENANCE</b>
74	THE IMPORTANCE OF MAINTENANCE
75	MAINTENANCE SAFETY
76	SAFETY PRECAUTIONS
77	MAINTENANCE SCHEDULE
80	TOOL KIT
81	SERIAL NUMBERS
82	COLOUR LABEL
83	ENGINE OIL
89	CRANKCASE BREATHER
90	SPARK PLUGS
93	THROTTLE OPERATION
94	IDLE SPEED
95	AIR CLEANER
96	COOLANT
97	DRIVE CHAIN
103	DRIVE CHAIN SLIDER
104	FRONT AND REAR SUSPENSION INSPECTION
105	SIDE STAND
106	WHEEL REMOVAL
112	BRAKE PAD WEAR

page

114	BATTERY
116	FUSE REPLACEMENT
119	BRAKELIGHT SWITCH ADJUSTMENT
120	BULB REPLACEMENT
<b>126</b>	<b>CLEANING</b>
<b>130</b>	<b>STORAGE GUIDE</b>
130	STORAGE
132	REMOVAL FROM STORAGE
<b>133</b>	<b>SPECIFICATIONS</b>
<b>137</b>	<b>CATALYTIC CONVERTER</b>
<b>138</b>	<b>NOISE CONTROL SYSTEM (AUSTRALIA ONLY)</b>