

(Ref.No.) Description	Function
(1) Speedometer	Shows riding speed. This shows your speed in kilometers per hour (km/h) and/or miles per hour (mph) depending on the type. The speedometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(2) Neutral indicator (green)	Lights when the transmission is in neutral.
(3) High beam indicator (blue)	Lights when the headlight is on high beam.