


Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Push the right control button (3), to select the digital clock mode.
3. Press and hold the left control button (2) and right control button (3) for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.

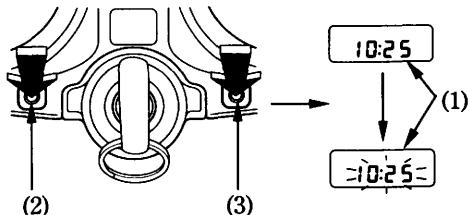

- (1) Digital clock
- (2) Left control button
- (3) Right control button

4. Push the left control button until the desired time is displayed.
 - The time is advanced by one hour, each time the button is pushed.

