


AIR CLEANER

Refer to the Safety Precautions on page 76 .


The air cleaner should be serviced at regular intervals (page 78). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (page 58).
2. Remove the attaching screws (1) and air cleaner housing cover (2).

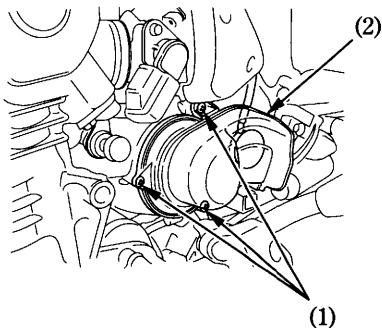

- (1) Attaching screws
- (2) Air cleaner housing cover

3. Pull out the air cleaner (3) and clean the air cleaner using compressed air from the outside, or replace it if necessary.
4. Install a new air cleaner.
Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.
5. Install the removed parts in the reverse order of removal.

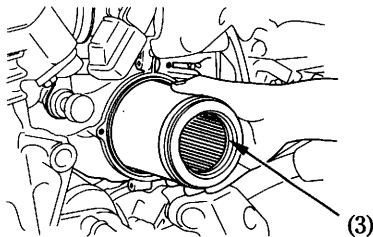

- (3) Air cleaner