


<b>(Ref. Nr.) Description</b>	<b>Function</b>
(10) Immobilizer system (HISS) indicator (red)	<p>This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 41).</p> <p>When the blinking function of this indicator is valid and the ignition switch is off, it keeps blinking for 24 hours (page 42).</p>
(11) Anti-lock brake system (ABS) indicator light (red) (CBF1000A)	<p>This indicator light normally illuminates when the ignition switch is set to ON and is extinguished when the motorcycle is ridden at a speed of more than 10 km/h (6 mph). In the event of problems with the ABS system this indicator flashes and remains on (see page 19).</p>