


(Ref. Nr.) Description	Function
(12) PGM-FI Malfunction Indicator Lamp (red)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system.</p> <p>It should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at  (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>
(13) Clock display	Shows the time in hours and minutes (see page 14)
(14) Odometer/trip meter display	<p>This display shows the following information:</p> <p><b>Odometer:</b> total distance travelled by the motorcycle.</p> <p><b>Tripmeter:</b> resettable distance of individual journeys.</p> <p>There are two tripmeters, tripmeters 1 and 2. You can switch between the display of tripmeter 1 and 2 by repeatedly pressing the left button(8).</p> <p>To reset the tripmeter hold down left button (8) while displaying tripmeter 1 or tripmeter 2 for a further two seconds.</p>