

REMOVING THE HALF FAIRINGS


The side fairings (1) must be removed in order to perform maintenance in the area of the headlight unit.

Removal:

1. Remove the two upper and lower hex screws (2).
2. Remove the lower clip (3) from its seat by pressing it in the centre and then withdrawing it.
3. Remove the bolt (4).
4. Disengage the tabs (5) from their locations and slide the half-fairing forwards until it is freed from the front locking mechanism (6).
5. Disconnect the front turn signals cable connector.

Installation:

1. Reassemble the parts by following the removal procedure in reverse.

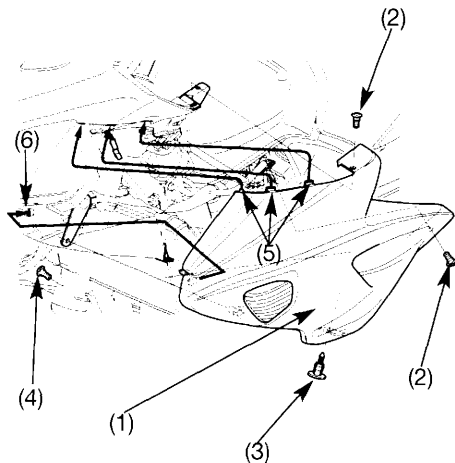

- (1) Left half fairing
(2) Socket screws
(3) Clip
(4) Bolt

- (5) Tabs
(6) Front locking mechanism