

INNER PANEL REMOVAL


The right and left inner panels can be removed in the same manner in order to perform maintenance operations:

Removal:


1. Remove the clip (1) and take it out (see page 56).
2. Remove the inner panel (2).

Installation:

1. Installation can be done in the reverse order of removal.

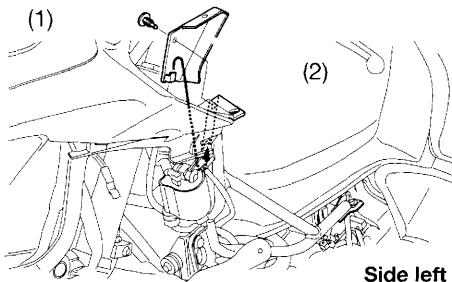

Side left

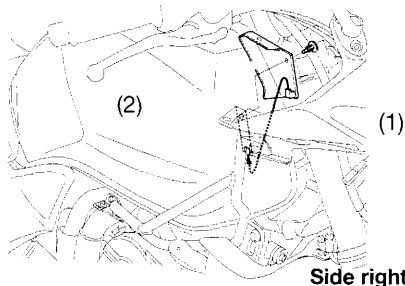

Side right

- (1) Clip
(2) Inner panel