


Clip

Removal

- ① Press down on the centre pin to release the lock.
- ② Pull out the clip from the hole.

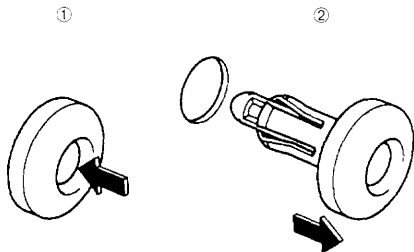

Installation

- ① Slightly open the retaining pawls and then push them out.
- ② Insert the clip into the hole.
- ③ Lightly press down on the centre pin to lock the clip.

