

Starting procedure

This motorcycle has a fuel-injection engine with an automatic fast start system. Follow the procedure indicated below.

Any air temperature

- Press the starter button with the throttle completely closed.


The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

Even if the engine coolant stays below the specified temperature, the cooling fan sometimes starts up running when you rev up the engine, but this is normal.

Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discolouration.

Flooded engine

If the engine fails to start after repeated attempts, it may be flooded.

1. Leave the engine stop switch set to  (RUN).
2. Open throttle fully.
3. Press the start button for 5 seconds.
4. Follow the normal starting procedure.
5. If the engine starts with unstable idle, open the throttle slightly.
If the engine does not start, wait for 10 seconds, then follow steps 1-4 again.