

LEFT SIDE COVER


The left side cover must be removed for battery and fuse maintenance.

Removal:

1. Remove the seat (page 42).
2. Remove the screw A (1) and screws B (2).
3. Pull out the prong (3) from the grommet (4).
4. Remove the side cover.

Installation:

1. Align the prong with the grommet. Press the side cover into position.
2. Fasten the screw A and screws B.

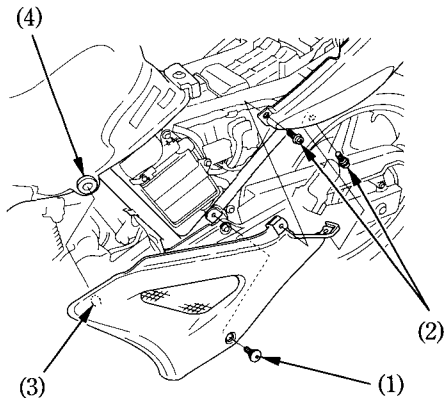

- (1) Screw A
(2) Screws B

- (3) Prong
(4) Grommet