



1. To drain the oil, remove the oil filler cap/dipstick, oil drain plug (1) and sealing washer (2).
2. After the engine oil has been drained out, hold the motorcycle upright for 10*15 seconds to assure complete draining.

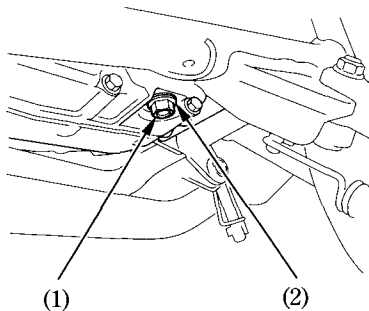

- (1) Oil drain plug
(2) Sealing washer

3. Remove the oil filter bolts (3) and oil filter cover (4).
4. Remove the oil filter (5) from the cover.
5. Check that the oil filter cover O-ring (6) is in good condition and then install the spring (7) and new oil filter. Use the Honda oil filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.

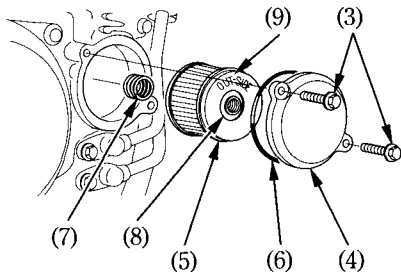

- (3) Oil filter bolts
(4) Oil filter cover
(5) Oil filter
(6) O-ring
(7) Spring
(8) Rubber seal
(9) "OUT-SIDE" mark