


Rear Wheel Removal


Refer to the Safety Precautions on page 59 .

1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Remove the rear brake adjusting nut (1), disconnect the brake rod (2) from the brake arm (3) by pushing down on the rear brake pedal.

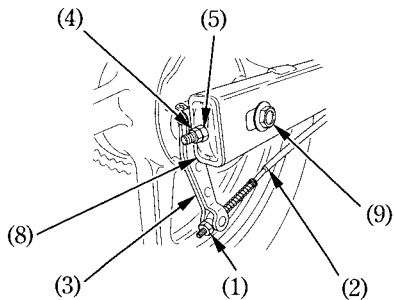

- | | |
|------------------------------|--------------------------------|
| (1) Rear brake adjusting nut | (4) Drive chain lock nuts |
| (2) Brake rod | (5) Drive chain adjusting nuts |
| (3) Brake arm | (9) Rear axle shaft |

3. Loosen the drive chain lock nuts (4) and drive chain adjusting nuts (5).
4. Remove the rear axle nut (6), axle washer (7) and chain adjusters (8), and pull out the rear axle shaft (9). Push the wheel forward and remove the drive chain from the rear sprocket.
5. Remove the rear wheel and side collar.

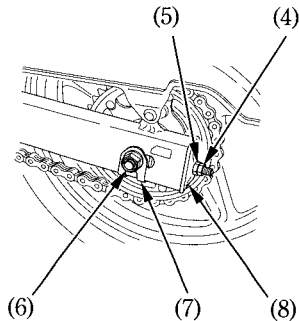

- | | |
|-------------------|---------------------|
| (6) Rear axle nut | (8) Chain adjusters |
| (7) Axle washer | |