

Main Fuse:

The main fuse (1) is located behind the left side cover.


The specified fuse is:

30 A

1. Remove the seat (page 42).
2. Remove the left side cover (page 44).
3. Disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull out the old fuse and install a spare main fuse (4).

The spare main fuse is located under the starter magnetic switch.

5. Reconnect the connector and install the left side cover.
6. Install the seat.

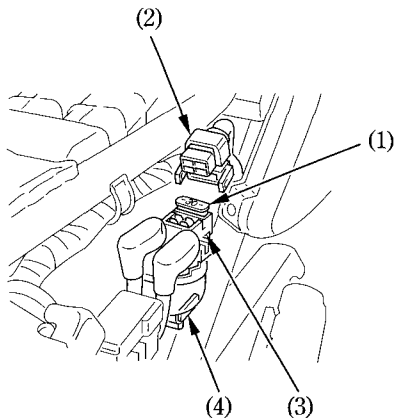

- (1) Main fuse
- (2) Wire connector
- (3) Starter magnetic switch
- (4) Spare main fuse