


Position Light Bulb

1. Remove the headlight (1) (page 100).
2. Pull out the socket (2).
3. Pull out the bulb (3) without turning.
4. Install a new bulb in the reverse order of removal.

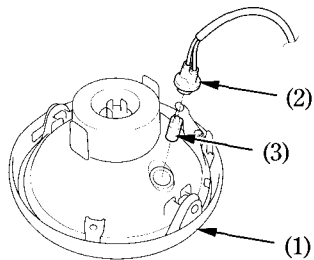

- (1) Headlight
(2) Socket
(3) Position light bulb