


WHEEL REMOVAL

Refer to the Safety Precautions on page 64.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.

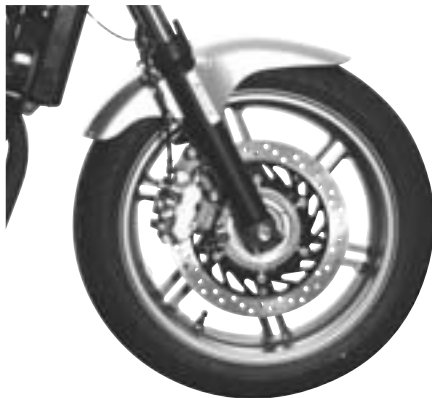

<FRONT WHEEL>