


Front turn signal bulb


1. Remove the screw (1).
2. Remove the turn signal lens (2).
3. Remove the bulb (3) by pressing in and turning counterclockwise.
4. Install a new bulb and check that the light operates properly.

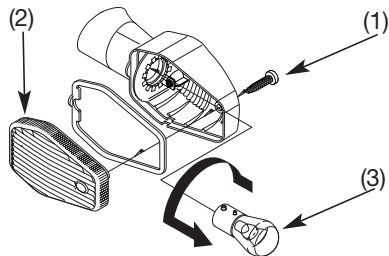

- (1) Screw
(2) Turn signal lens
(3) Bulb

Rear turn signals bulb

1. Remove the taillight lens (page 108).
2. Remove screw (1).
3. Remove the turn signal lens (2).
4. Remove bulb (3) by pressing it and turning it counterclockwise.
5. Fit a new bulb and check that the turn signal is working properly.

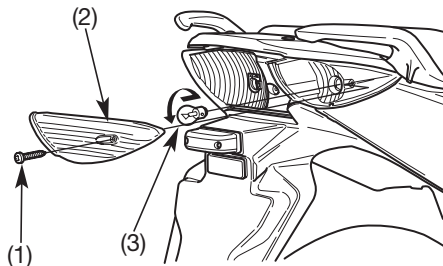

- (1) Screw
(2) Turn signal lens
(3) Bulb