

# MAJOR COMPONENTS (Information you need to operate this motorcycle)

## ▲ WARNING

**\* If the Pre-ride Inspection (page 40) is not performed, severe personal injury or vehicle damage may result.**

## SUSPENSION


### Rear Suspension

The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the rebound damping and spring preload adjuster.

### Damping force adjustment :

The damping force adjuster (1) is located behind the right muffler protector.

To reduce damping force:  
turn the adjuster counterclockwise.  
To increase damping force:  
turn the adjuster clockwise.

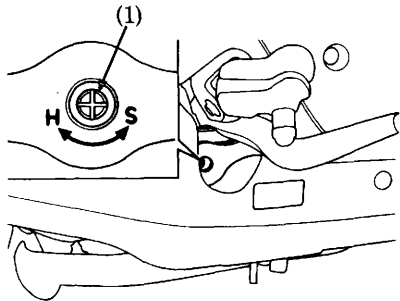

(1) Damping force adjuster