


5. Pull out the retainer (5).
6. Pull out the air cleaner element (6).
7. Discard the air cleaner element.
8. Install a new air cleaner element.


Use the Honda genuine air filter or an equivalent filter specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause premature engine wear or performance problems.

9. Install the removed parts in the reverse order of disassembly.

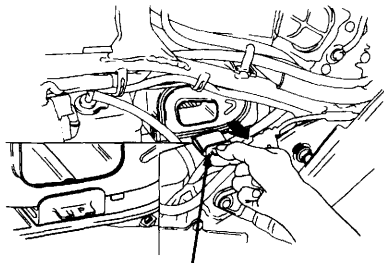

(5) Retainer

(5)

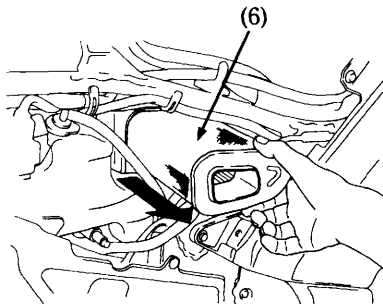

(6) Air cleaner element