

WHEEL REMOVAL


(Refer to the maintenance precautions on page 59).

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right caliper assembly (1) from the fork leg by removing the fixing bolts (2).


CAUTION:

* To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

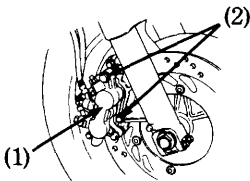

(1) Right caliper assembly (2) Fixing bolts

3. Cover the front wheel with a protective tape or equivalent.

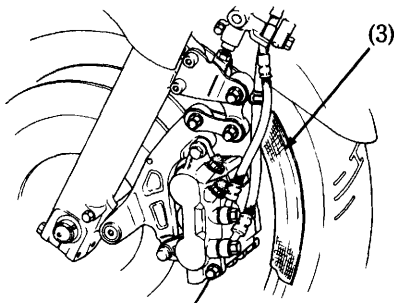

(3) Protective tape