


⟨REAR⟩

1. Remove the turn signal lens from the turn signal by removing the screw (1).
2. Slightly press in on the bulb (2) and turn in 90° counterclockwise. Remove the bulb.
3. Install a new bulb in the reverse order of removal.

NOTE:

- * Do not use bulbs other than that specified.
- * After installing a new bulb, check that the light operates properly.

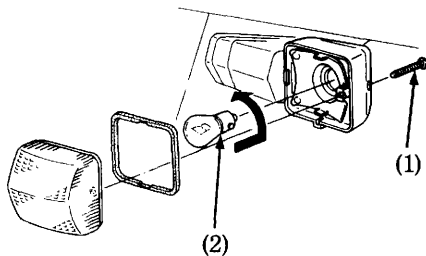

(1) Screw

(2) Bulb