

<b>( Ref. No. ) Description</b>	<b>Function</b>
(7) Neutral indicator (green)	Lights when the transmission is in neutral.
(8) High beam indicator (blue)	Light when the headlight is on high beam.
(9) Right turn signal indicator	Flashes when the right turn signal operates.
(10) Tachometer	Shows engine rpm.
(11) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b></p>
(12) Fuel gauge	Shows approximate fuel supply available (see page 13 ).
(13) Coolant temperature gauge	Shows coolant temperature (see page 12 ).
(14) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.