

MAINTENANCE

Page

| | |
|----|---------------------------|
| 54 | MAINTENANCE |
| 55 | Maintenance Schedule |
| 58 | Tool Kit |
| 59 | Serial Numbers |
| 60 | Colour Label |
| 61 | Maintenance Precautions |
| 62 | Air Cleaner |
| 64 | Crankcase Breather |
| 65 | Engine Oil |
| 69 | Spark Plugs |
| 72 | Throttle Operation |
| 73 | Idle Speed |
| 74 | Drive Chain |
| 79 | Drive Chain Slider |
| 79 | Front and Rear Suspension |
| 80 | Side Stand |
| 81 | Wheel Removal |

page

| | |
|-----|--|
| 89 | Brake Pad Wear |
| 91 | Brake System Inspection |
| 92 | Battery |
| 95 | Fuse Replacement |
| 97 | Stoplight Switch Adjustment |
| 98 | Bulb Replacement |
| 104 | CLEANING |
| 106 | STORAGE GUIDE |
| 106 | Storage |
| 108 | Removal from Storage |
| 109 | SPECIFICATIONS |
| 113 | NOISE CONTROL SYSTEM (AUSTRALIA ONLY) |