

<b>(Ref.No.) Description</b>	<b>Function</b>
(8) Right turn signal indicator (green) (Except U type) (amber) (U type)	Flashes when the right turn signal operates.
(9) High beam indicator (blue)	Lights when the headlight is on high beam.
(10) Malfunction indicator (MIL) (red)	Lights when coolant is over the specified temperature, and/or engine oil pressure is below normal operating range, and/or PGM-FI (Programmed Fuel Injection) system and/or HESD (Honda Electronic Steering Damper) is abnormal. Should also light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm. See pages 20 – 25 .