


(Ref.No.) Description	Function
(1) Fuel indicator (amber)	Lights when there is only few fuel left in the fuel tank. The amount of fuel left in the tank when lights and with the vehicle set upright is approximately: 3.5 ℓ (0.92 US gal , 0.77 Imp gal)
(2) Neutral indicator (green)	Lights when the transmission is in neutral.
(3) Left turn signal indicator (green) (Except U type) (amber) (U type)	Flashes when the left turn signal operates.
(4) Immobilizer system (HISS) indicator (red)	Except MX type: This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 60). When the blinking function of this indicator is valid and the ignition switch is OFF, it keeps blinking for 24 hours (page 61).