


The immobilizer system has such a function that keeps the immobilizer system (HISS) indicator blinking at 2 second intervals for 24 hours. This blinking function can be turned on or off.

To alter the blinking function:

1. Turn the ignition switch ON.
2. Push and hold the SEL button (2) for more than 2 seconds.

The immobilizer system (HISS) indicator (1) instantly flash, the function is enabled.

3. Turn the ignition switch OFF and remove the key.

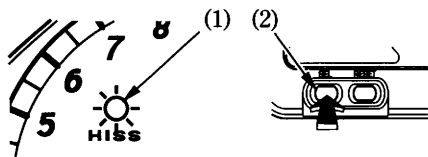

- (1) Immobilizer system (HISS) indicator
- (2) SEL button