


To turn the blinking function on or off:

1. Turn the ignition switch ON.
2. When the odometer is displayed (page 27), push and hold control button A (2) for more than 2 seconds.
The immobilizer system (HISS) indicator (1) comes on briefly and the blinking function is set to on or off.
3. Turn the ignition switch OFF and remove the key.

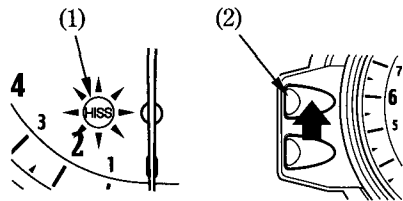

- (1) Immobilizer system (HISS) indicator
(2) Control button A

If the system repeatedly does not recognize the coding of your key, contact your Honda dealer.

- The system may not recognize the key's coding if any other immobilizer key is near the ignition switch. To make sure the system recognizes the key code, keep each immobilizer key on a separate ring.
- Do not attempt to alter the immobilizer system (HISS) or add other devices to it. Electrical problems could result, making it impossible to start your motorcycle.
- If all keys are lost, the PGM-FI unit/ignition control module must be replaced.