

(Ref. No.) Description	Function
(14) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: * Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(15) Immobilizer system indicator	This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at ○ (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start. (page 36)
(16) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.
(17) Fuel indicator	Lights when there is only a few fuel left in the fuel tank. about: 4.0ℓ (1.06 US gal, 0.88 Imp gal)