


5. Remove the oil cooler upper mount bolts (1) and harness guide (2).
6. Remove the oil cooler lower mount bolts (3).
7. Move the oil cooler (4) forward.

CAUTION:

* **Be careful not to damage the oil cooler fins.**

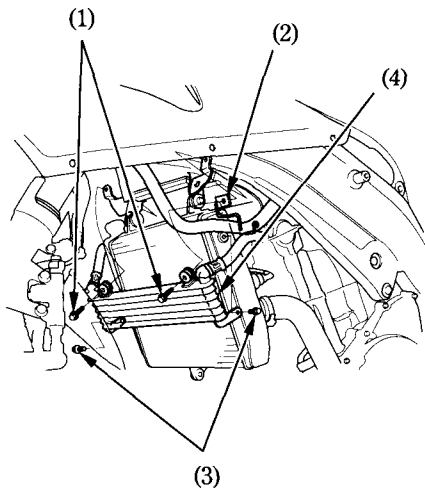

- | | |
|-----------------------|-----------------------|
| (1) Upper mount bolts | (3) Lower mount bolts |
| (2) Harness guide | (4) Oil cooler |