

# 2. FRAME/BODY PANELS/EXHAUST SYSTEM

BODY PANEL LOCATIONS	2-0	REAR FENDER	2-3
SERVICE INFORMATION	2-1	UNDER COWL	2-3
TROUBLESHOOTING	2-1	MIDDLE COWL	2-4
PASSENGER SEAT	2-2	FRONT FENDER	2-4
DRIVER SEAT	2-2	UPPER COWL	2-5
GRAB RAIL	2-2	EXHAUST SYSTEM	2-5
REAR COWL	2-2		

## SERVICE INFORMATION

### GENERAL

**▲ WARNING**

*Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.*

- This section covers removal and installation of the body panels and exhaust system.
- Always replace the exhaust pipe gaskets after removing the exhaust pipe from the engine.
- Always inspect the exhaust system for leaks after installation.

### TORQUE VALUES

Muffler mounting nut	13 N·m (1.3 kgf·m, 9 lbf·ft)
Exhaust pipe cover bolt	13 N·m (1.3 kgf·m, 9 lbf·ft)

## TROUBLESHOOTING

#### Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

#### Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler