

# 3. MAINTENANCE

SERVICE INFORMATION	3-1	SECONDARY AIR SUPPLY SYSTEM	3-14
MAINTENANCE SCHEDULE	3-3	DRIVE CHAIN	3-15
FUEL LINE	3-4	BRAKE FLUID	3-17
THROTTLE OPERATION	3-4	BRAKE PAD WEAR	3-18
CARBURETOR CHOKE	3-5	BRAKE SYSTEM	3-18
AIR CLEANER	3-5	BRAKE LIGHT SWITCH	3-18
CRANKCASE BREATHER	3-6	HEADLIGHT AIM	3-19
SPARK PLUG	3-6	CLUTCH SYSTEM	3-19
VALVE CLEARANCE	3-8	SIDE STAND	3-20
ENGINE OIL	3-10	SUSPENSION	3-20
ENGINE OIL STRAINER SCREEN	3-12	NUTS, BOLTS, FASTENERS	3-21
ENGINE IDLE SPEED	3-12	WHEELS/TIRES	3-21
RADIATOR COOLANT	3-13	STEERING HEAD BEARINGS	3-22
COOLING SYSTEM	3-14		

## SERVICE INFORMATION

### GENERAL

#### ⚠ WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.*
  - *If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in enclosed area.*
- Place the motorcycle on a level ground before starting any work.

### SPECIFICATIONS

ITEM		SPECIFICATIONS	
Throttle grip free play		2 – 6 mm (1/12 – 1/4 in)	
Spark plug		NGK	DENSO
	Standard	CR8E	U24ESR-N
	Optional	CR9E	U27ESR-N
Spark plug gap		0.7 – 0.8 mm (0.028– 0.032 in)	