


RADIATOR COOLANT

LEVEL CHECK


▲ WARNING

- **Wait until the engine is cool before removing the radiator cap. Remove the cap while the engine is hot and coolant is under pressure may cause serious scalding.**
- **Radiator coolant is poisonous. Take care to avoid getting coolant in your eyes, on your skin, or on your clothes.**
- **If coolant gets in your eyes, flush repeatedly with water and contact a doctor immediately.**
- **If coolant is accidentally swallowed, induce vomiting and contact a doctor immediately.**
- **KEEP OUT REACH OF CHILDREN.**

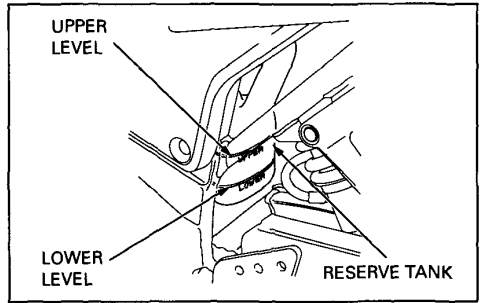

Check the coolant level of the reserve tank with the engine running at normal operating temperature. The level should be between the "UPPER" and "LOWER" level lines with the motorcycle in a vertical position on a flat, level surface.

If necessary, remove the driver seat (page 2-2), then remove the reserve tank cap and fill to the "UPPER" level line with a 50-50 solution of distilled water and recommended antifreeze (coolant mixture preparation; page 6-4).

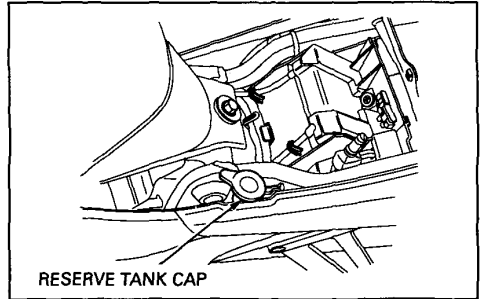

CAUTION:

- **Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages.**
- **Using tap water may cause engine damage.**

Check to see if there are any coolant leaks when the coolant level decreases very rapidly.

If the reserve tank becomes completely empty, there is a possibility of air getting into the cooling system. Be sure to remove all air from the cooling system as described on page 6-5.