


Starting enrichment (SE) valve cover

Install a new O-ring to the valve cover.
Install the valve cover to the carburetor body.

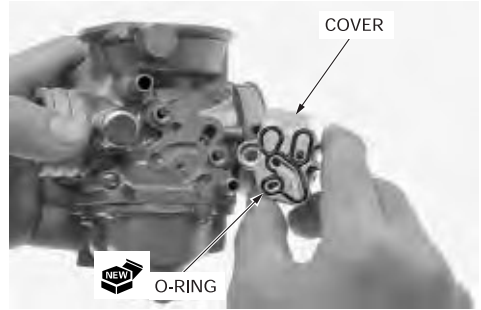


Install and tighten the two screws/washers securely.



Air cut-off valve

Install the diaphragm to the carburetor body.
Install a new O-ring, spring and cover.
Tighten the screws securely.

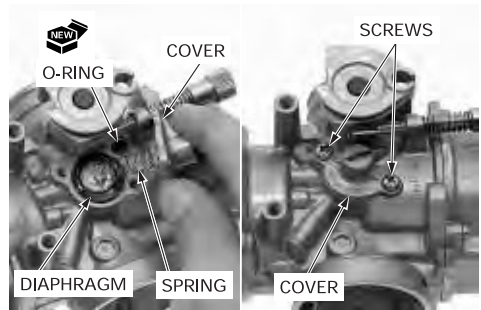

Throttle cable stay

Install the throttle cable stay and tighten the two screws securely.

