

## RADIATOR/COOLING FAN


### REMOVAL

Drain the coolant (page 6-5).

Remove the following:

- fuel tank (page 5-3)
- left middle cowl (page 2-4)

Disconnect the fan motor 3P connector.  
Disconnect the siphon tube from the radiator.  
Loosen the hose band screw and disconnect the lower radiator hose.

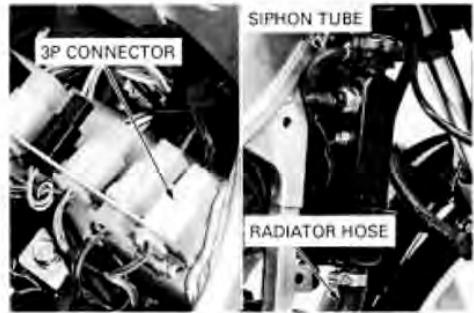

Loosen the hose band screw and disconnect the upper radiator hose.



Remove the radiator mounting bolts and collars.  
Slide the radiator to the right side, then release the upper grommet from the frame boss.  
Remove the radiator assembly.



### DISASSEMBLY

Disconnect the fan motor switch connector.  
Remove the two bolts and ground terminal.  
Remove the cooling fan assembly from the radiator.

