


Remove the nut and cooling fan.



Release the motor wire from the clamp.
Remove the screws and washers.

Remove the fan motor from the shroud.

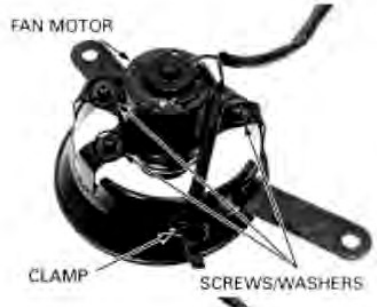

ASSEMBLY

